

FIG. 1

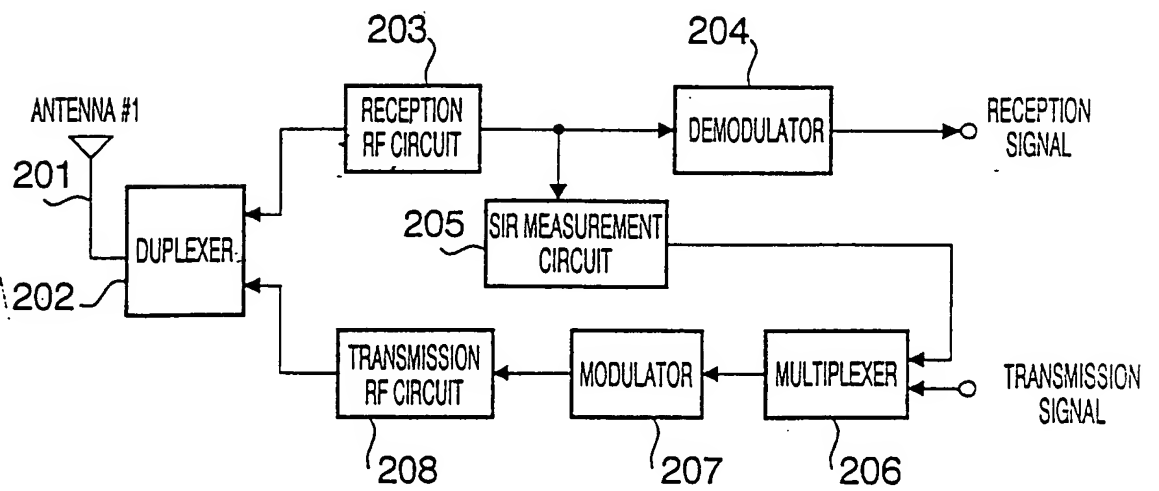


FIG. 2

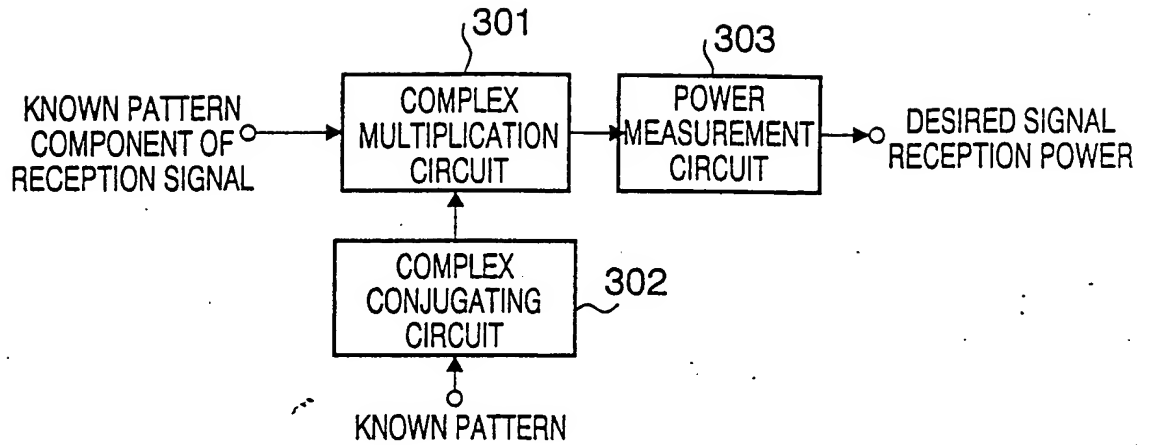


FIG. 3

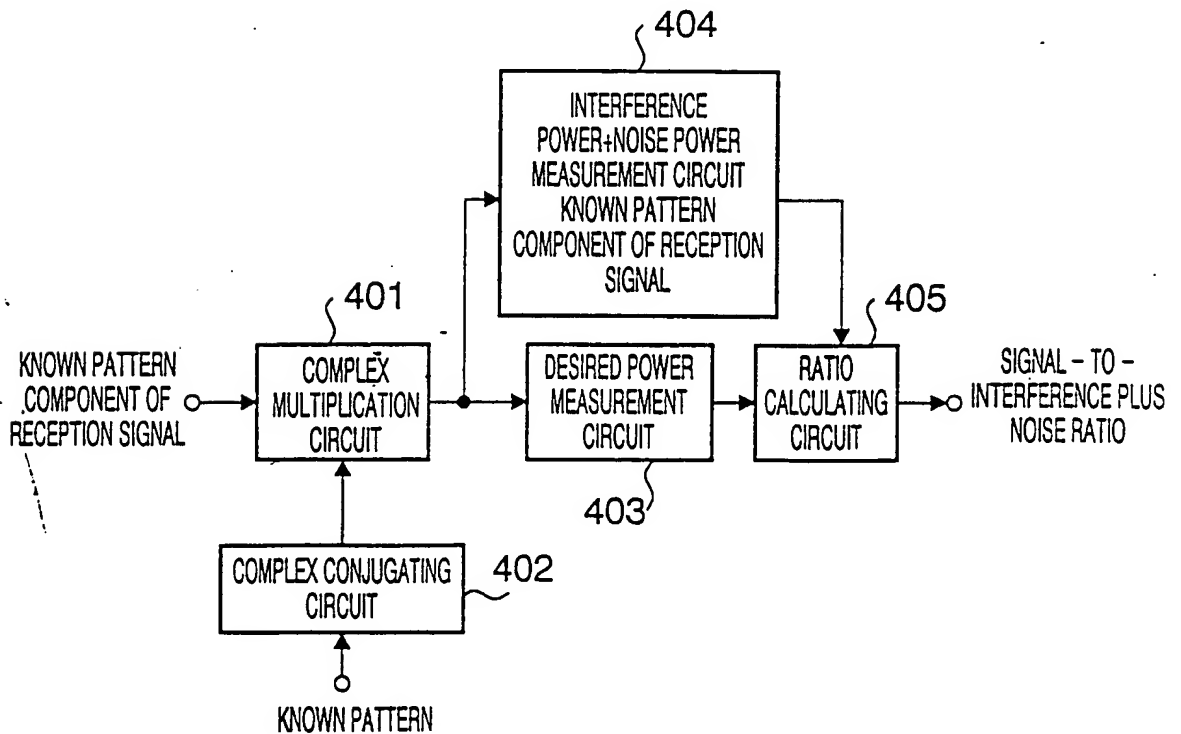


FIG. 4

FIG. 5

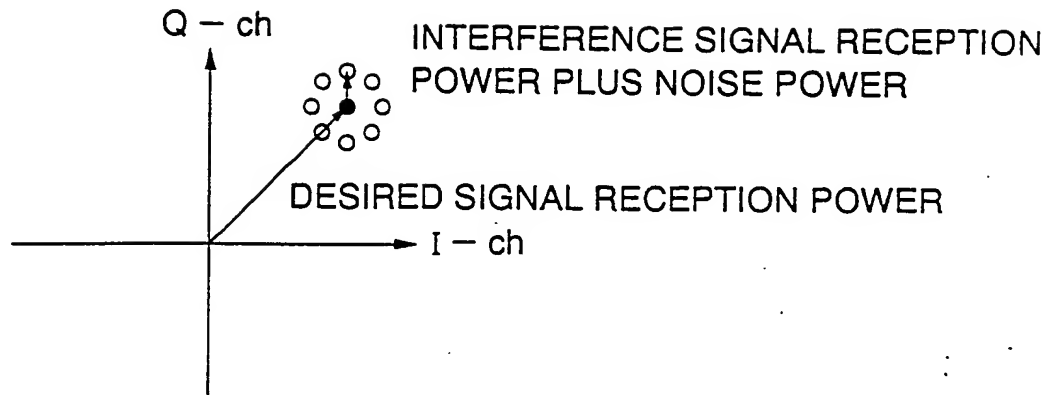


FIG. 6

PILOT SYMBOL	MESSAGE	CONTROL INFORMATION
-----------------	---------	------------------------

FIG. 7

PILOT SYMBOL	FLAG	MESSAGE
-----------------	------	---------

(a) WHEN FLAG = MESSAGE

PILOT SYMBOL	FLAG	CONTROL INFORMATION
-----------------	------	---------------------

(b) WHEN FLAG = CONTROL INFORMATION

10057897.012902

FIG. 8


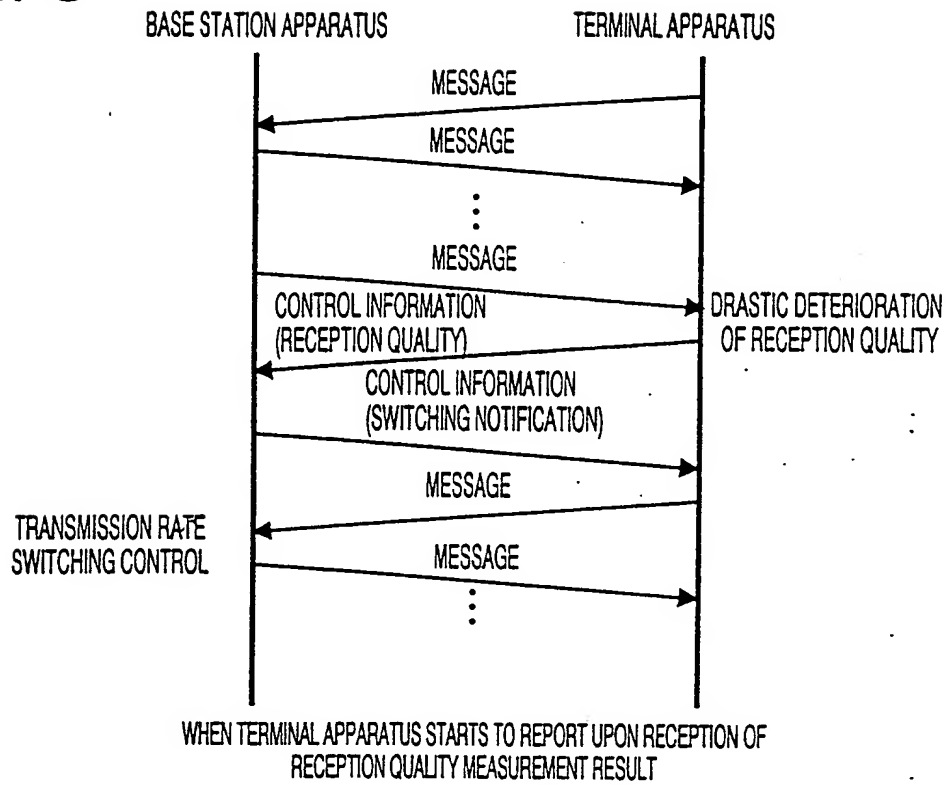



FIG. 9

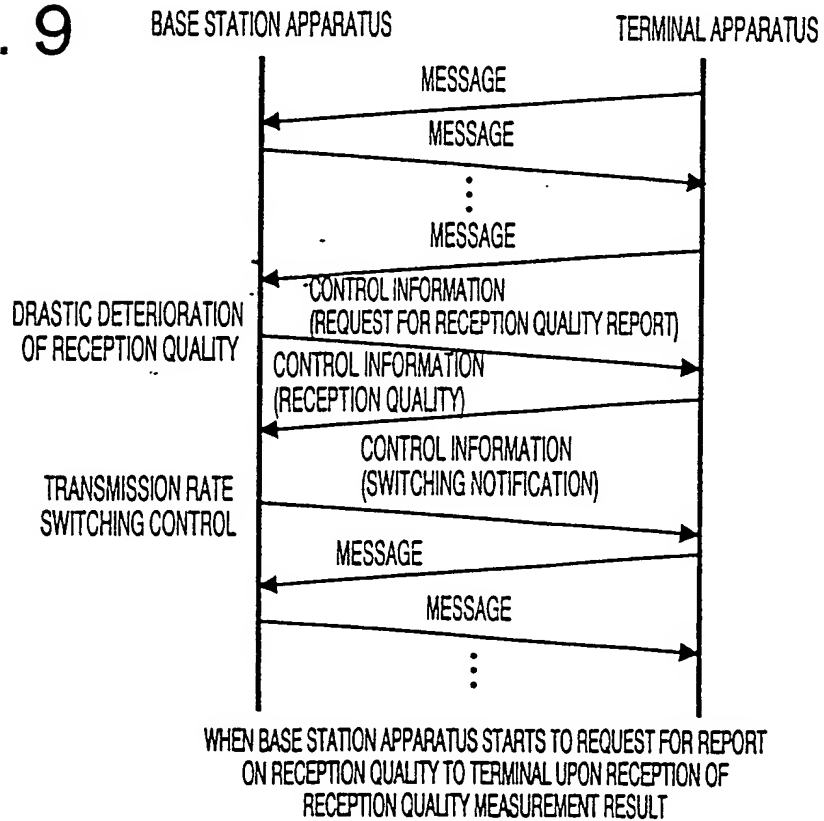

10057897.012902

BASE STATION APPARATUS

TERMINAL APPARATUS

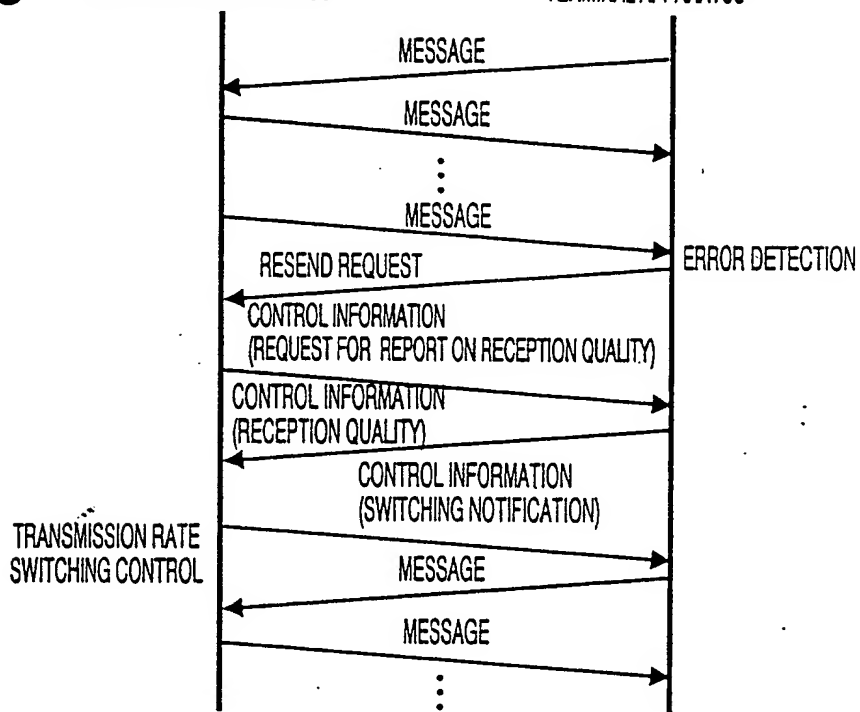


WHEN BASE STATION APPARATUS STARTS TO REQUEST FOR REPORT ON RECEPTION
QUALITY TO TERMINAL UPON RECEPTION OF RESEND REQUEST FROM TERMINAL

FIG. 11

BASE STATION APPARATUS

TERMINAL APPARATUS

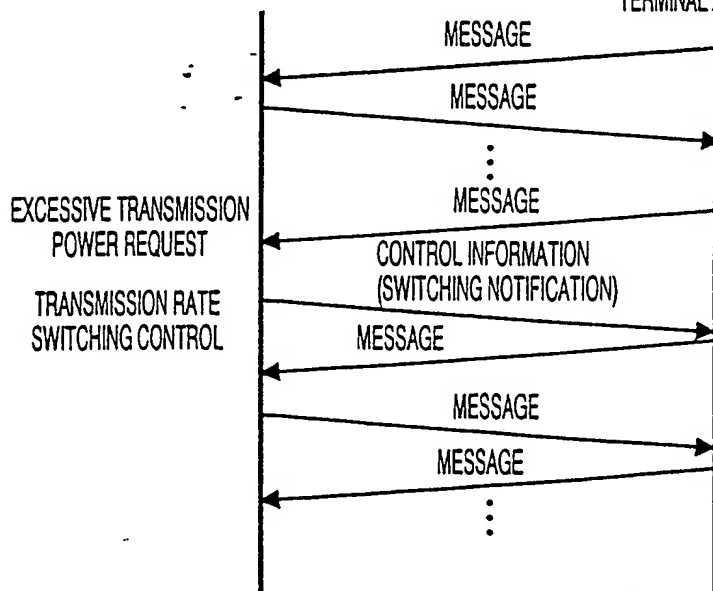

WHEN BASE STATION APPARATUS STARTS TRANSMISSION RATE SWITCHING CONTROL BASED ON OWN TRANSMISSION POWER

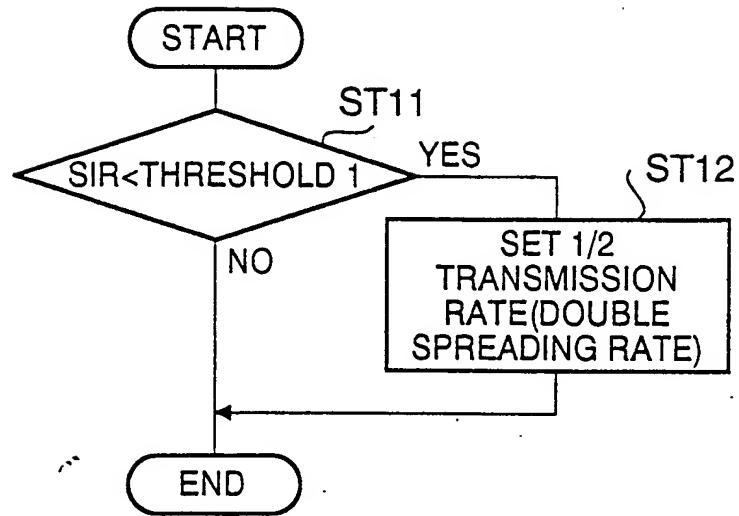


FIG. 12

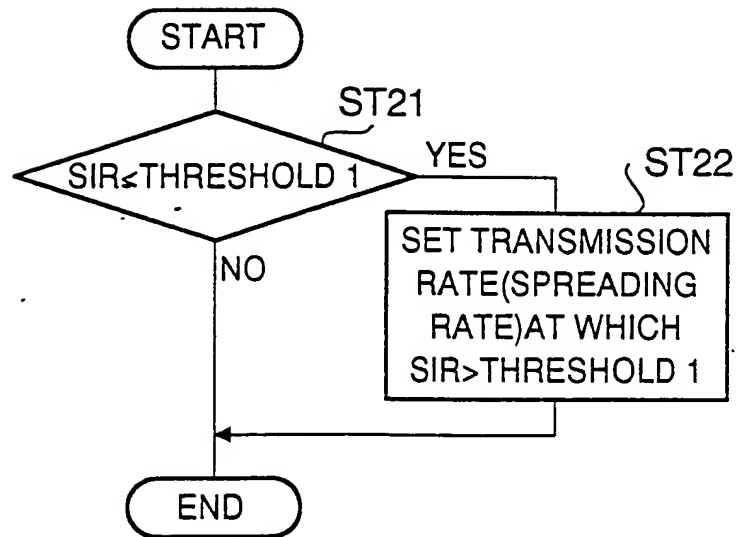


FIG. 13

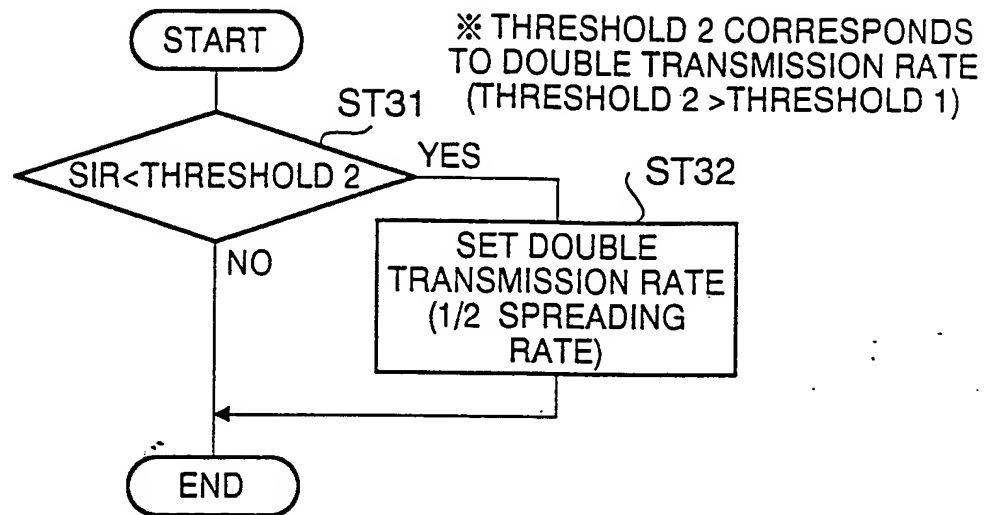


FIG. 14

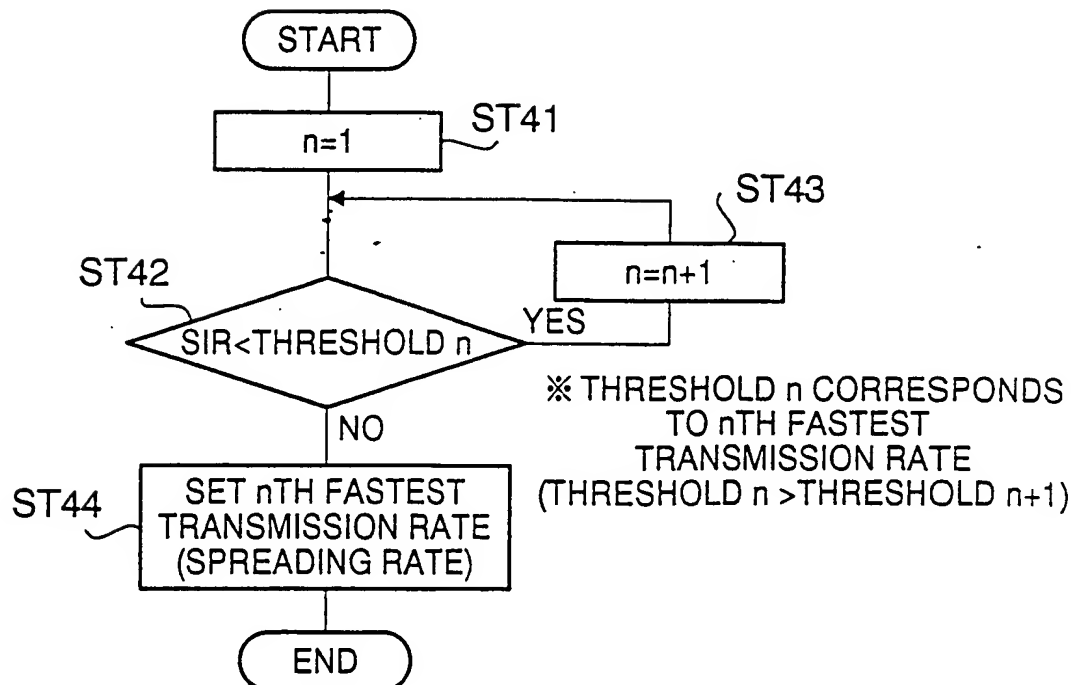


FIG. 15

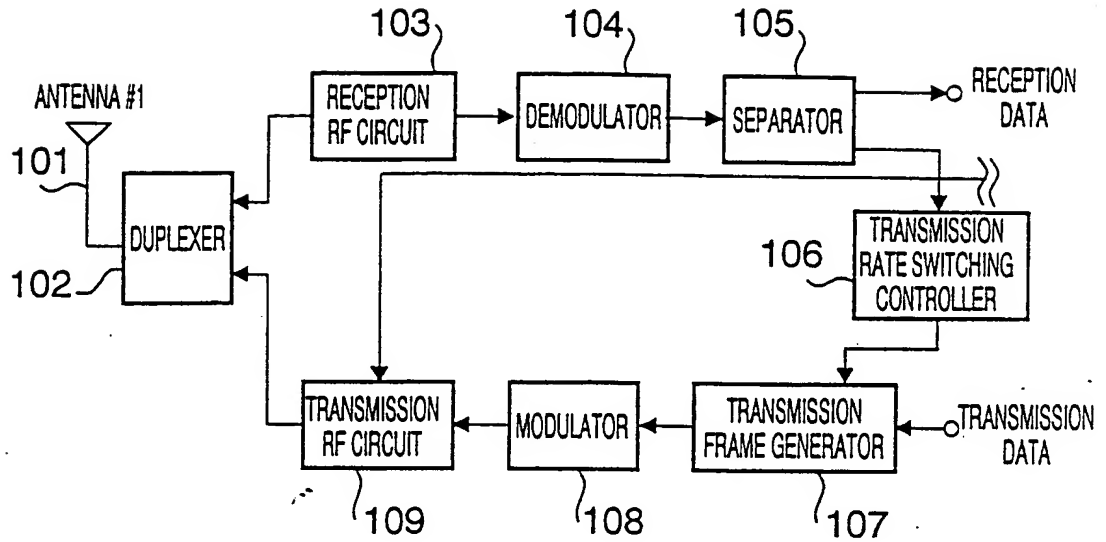


FIG. 16

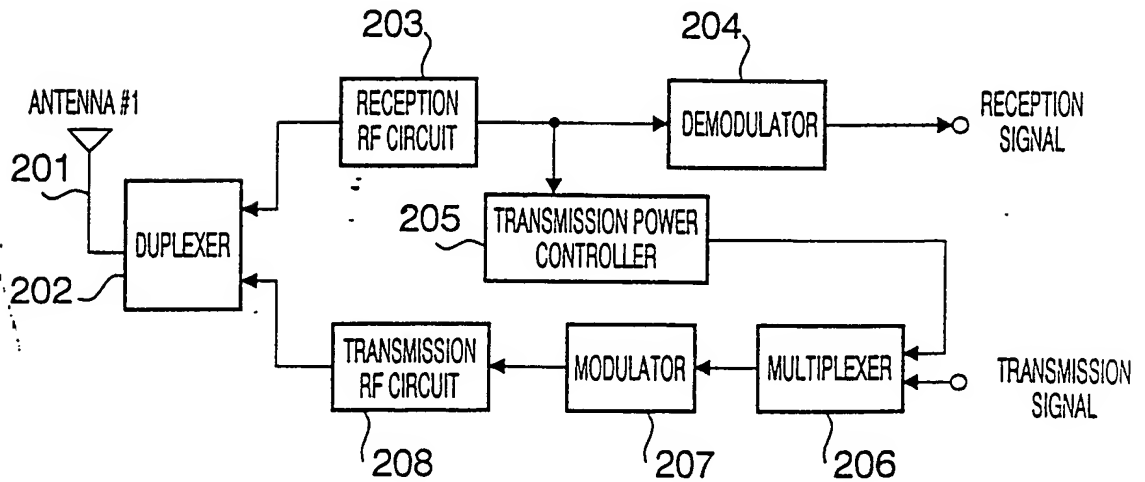


FIG. 17

10057897 012602

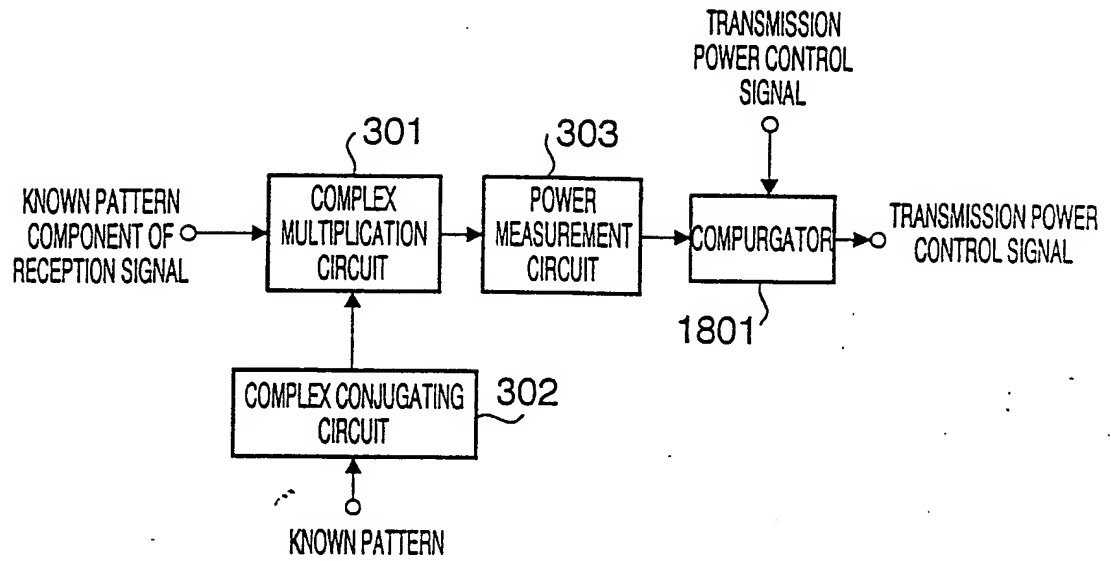


FIG. 18

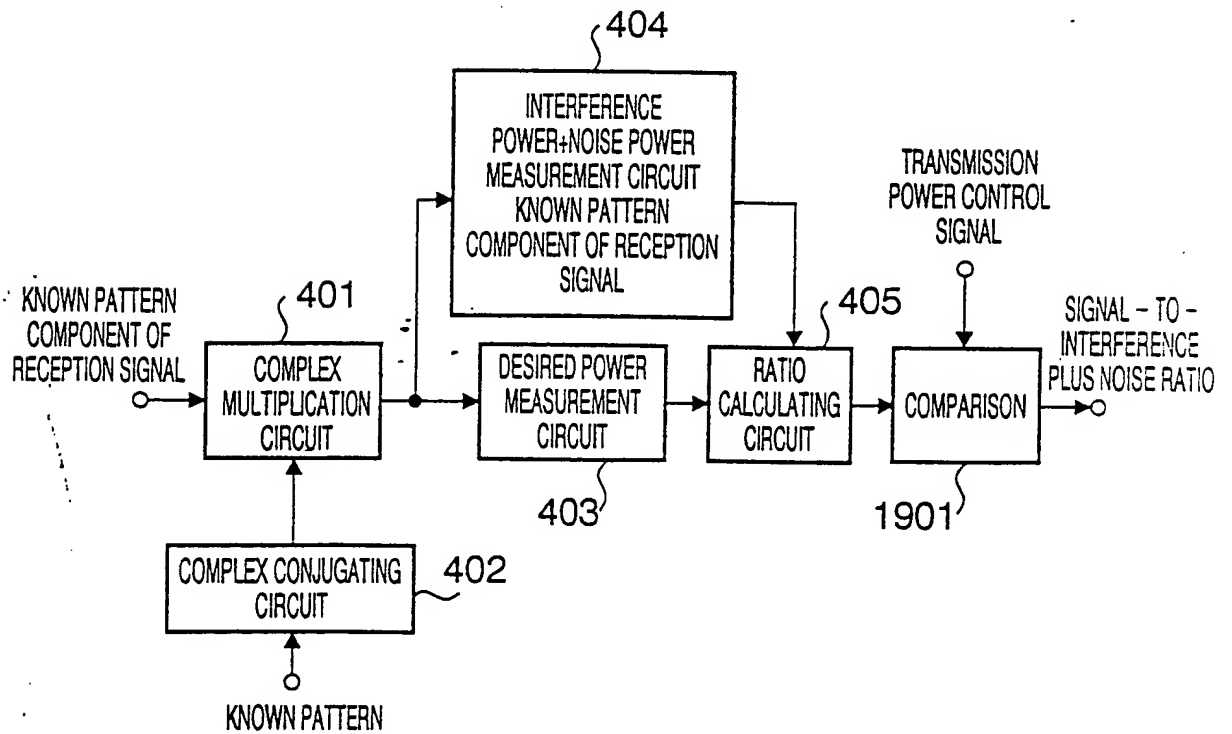


FIG. 19

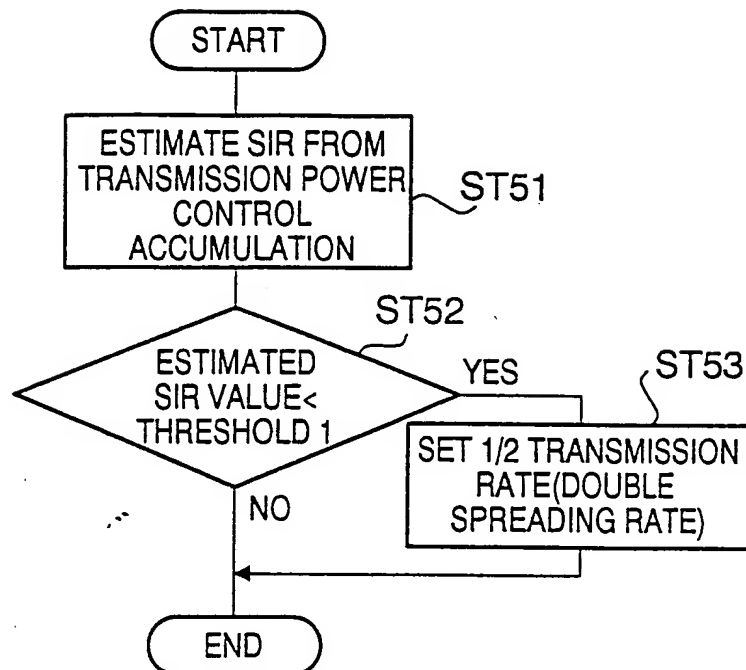


FIG. 20

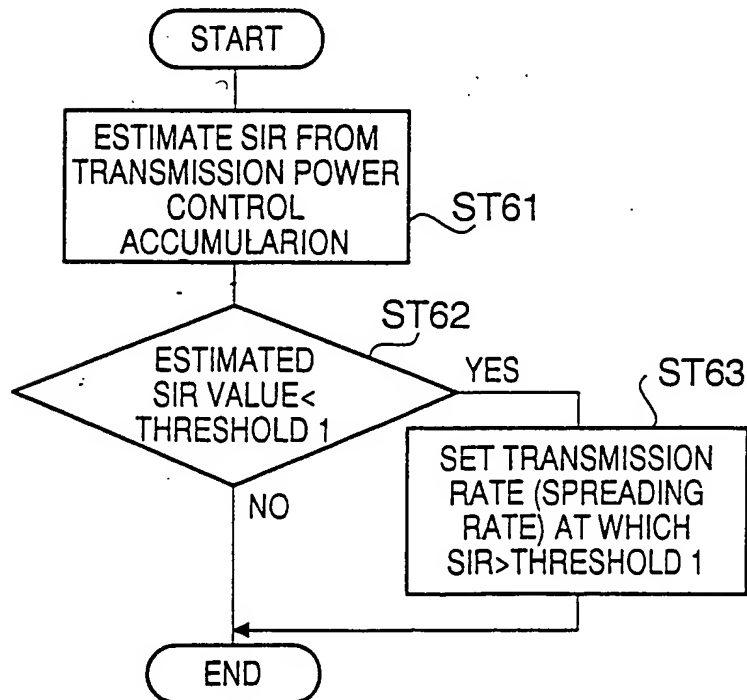


FIG. 21

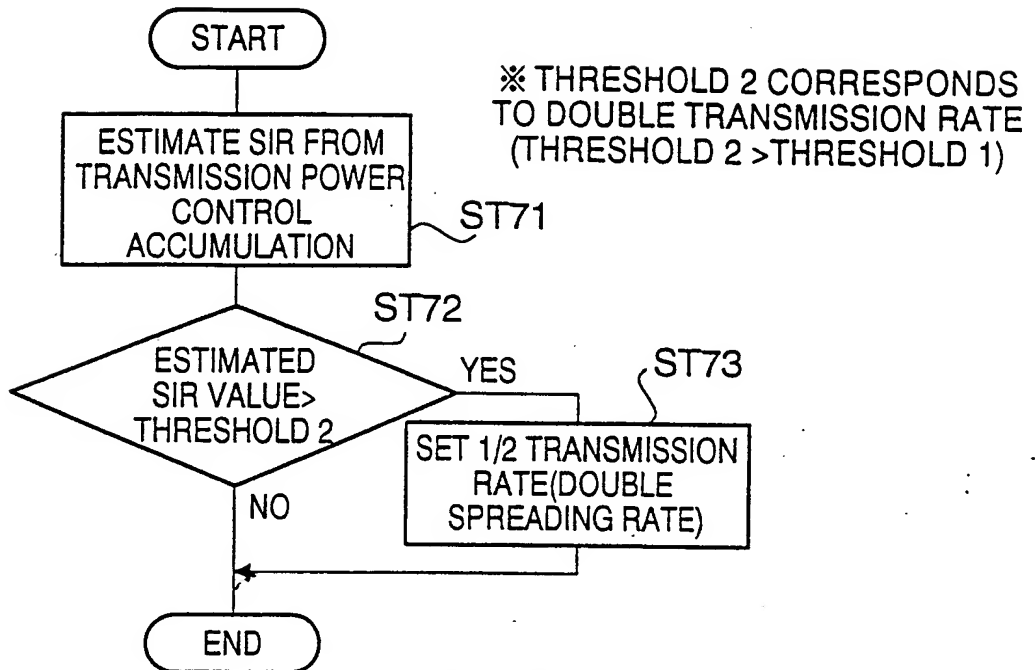


FIG. 22

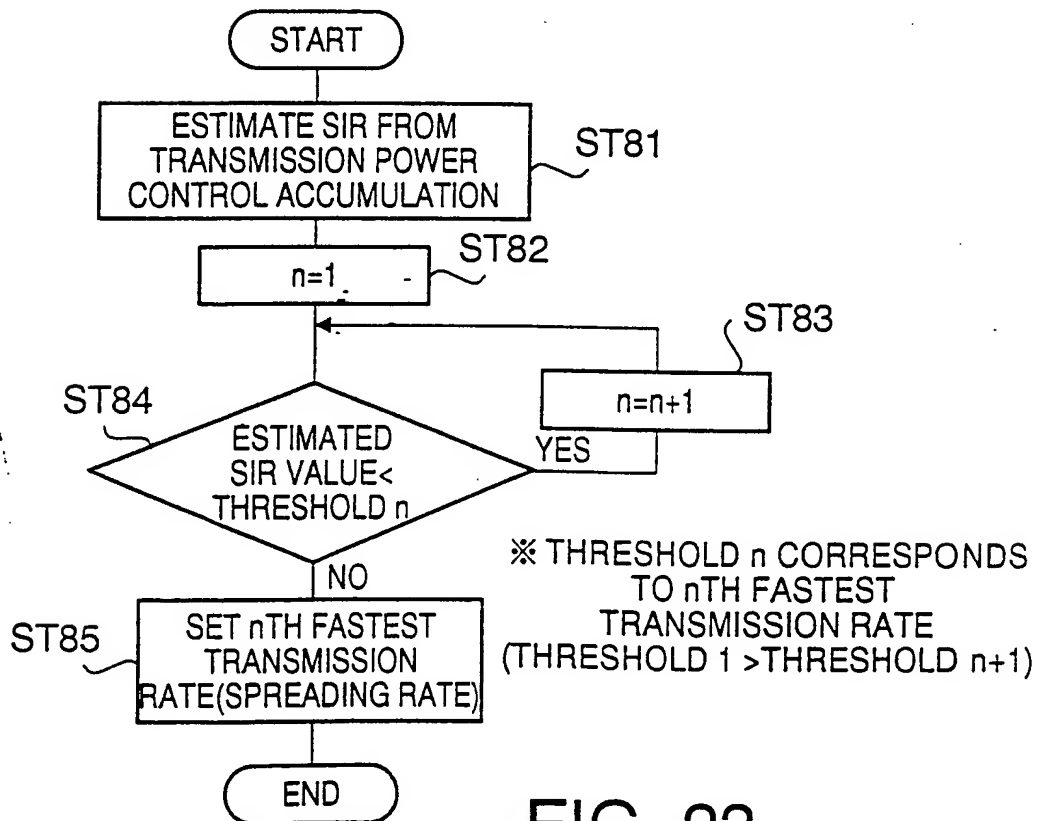


FIG. 23

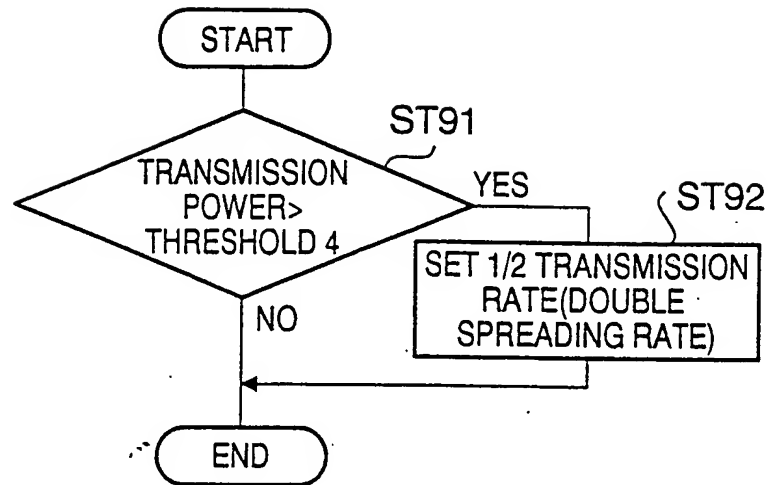


FIG. 24

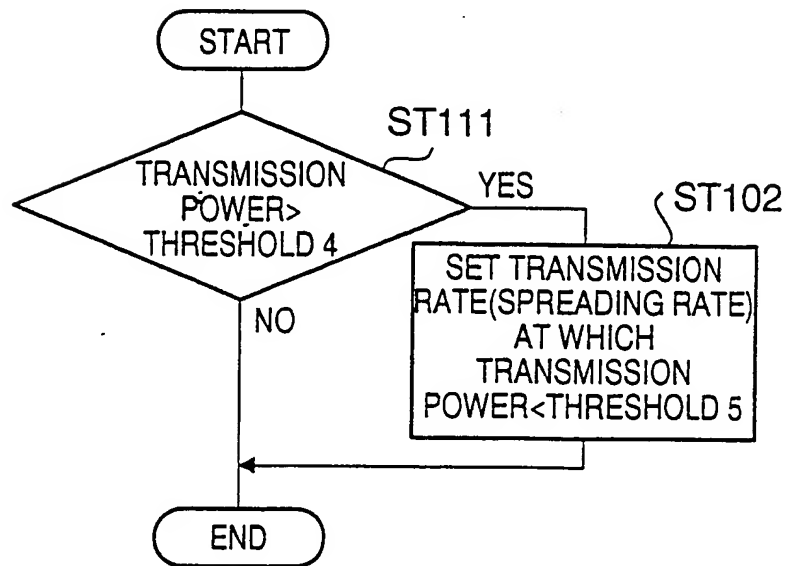


FIG. 25

10057897.012902

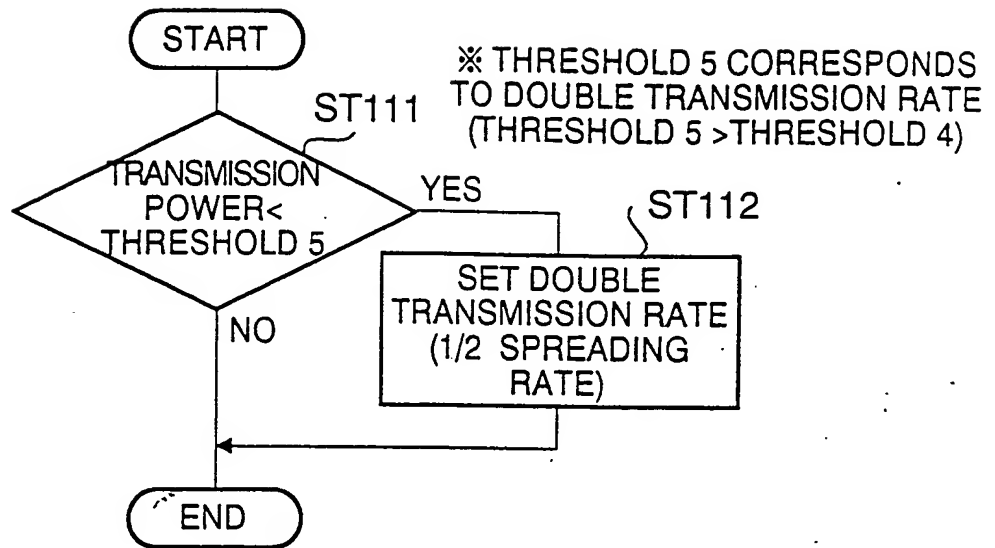


FIG. 26

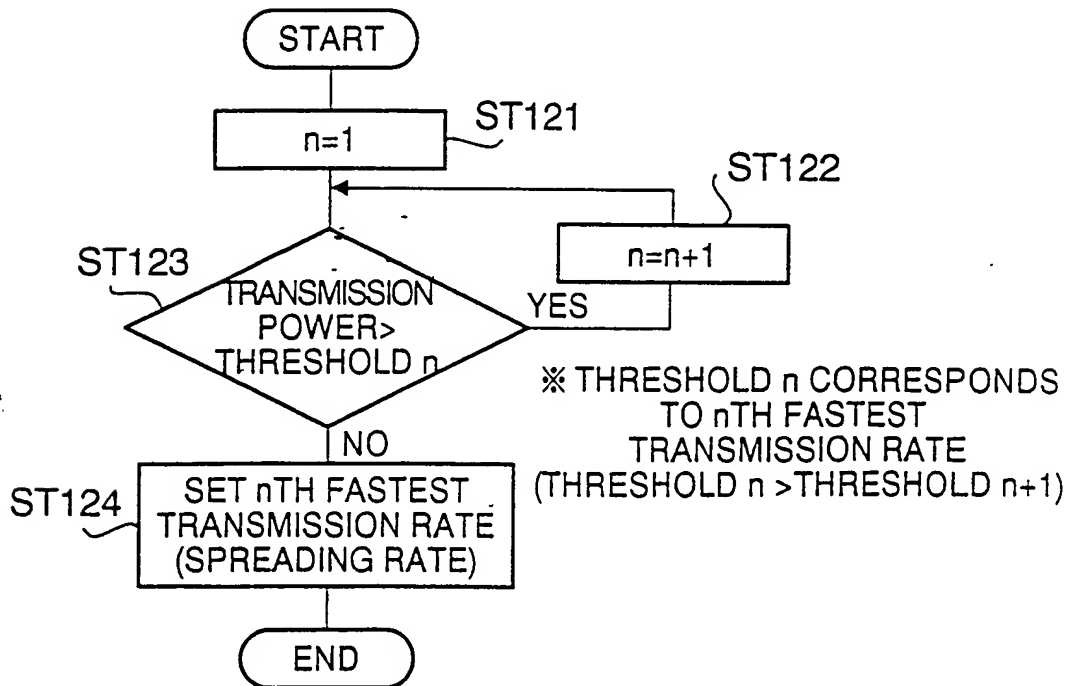


FIG. 27

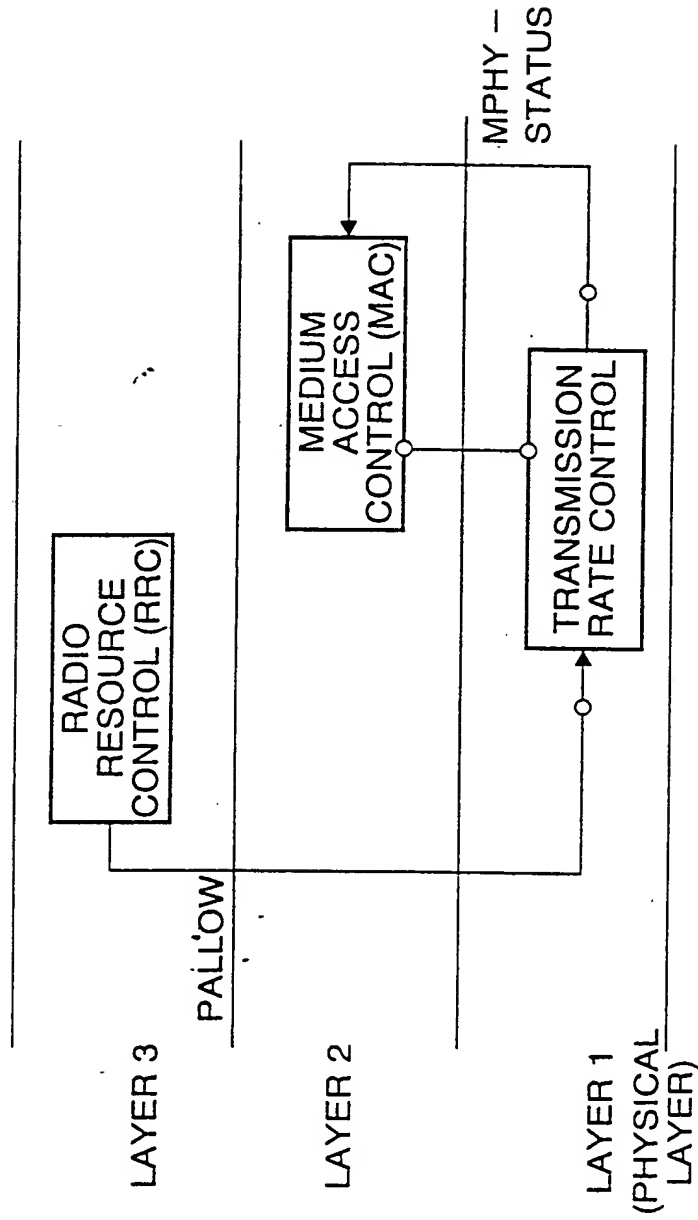


FIG. 28

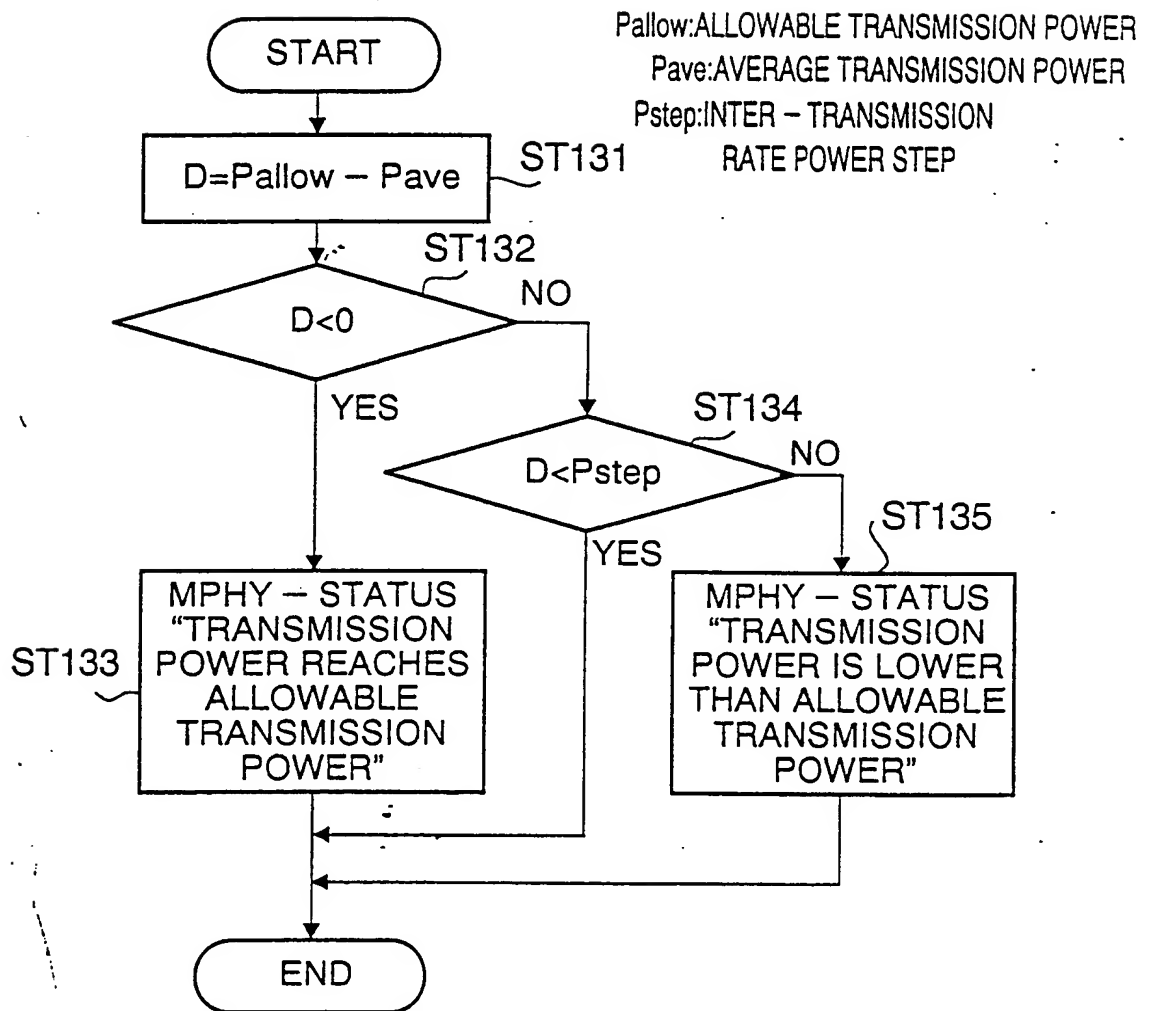


FIG. 29